


3-Panel Elbridge Firescreen Screen

Model #986

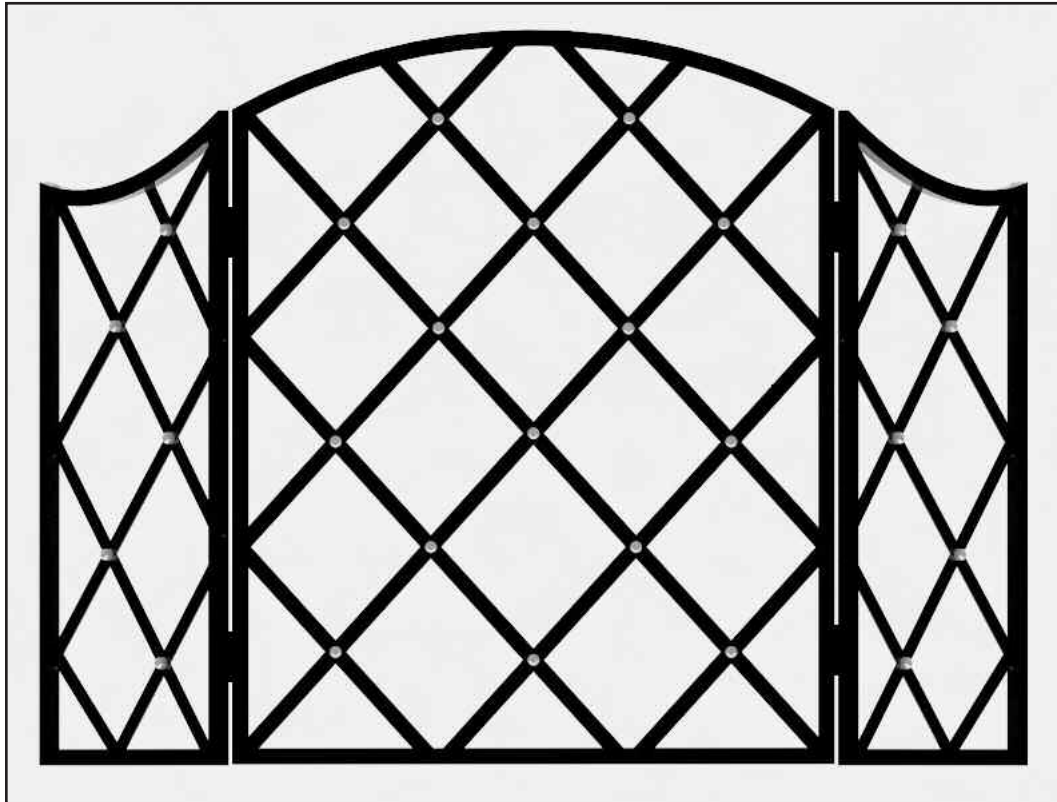

WARNING

- Do not allow children to play with or around screen.
- Do not attempt to clean the screen while it is hot.
- When screen is in use, do not touch with bare hands.
- Make sure screen is large enough to completely cover fireplace opening.
- Use heat-resistant fireplace gloves when moving or adjusting screen.

CAUTION

- Make sure the opened angles of the side panels are between 90° and 120°.


CARE AND MAINTENANCE

- Do not attempt to clean screen while it is hot.
- Lay screen flat on floor and wipe it with a soft cloth.
- To store, fold screen together, place it in box and secure.



Pantalla Elbridge para chimenea de 3 paneles

Modelo N.º986

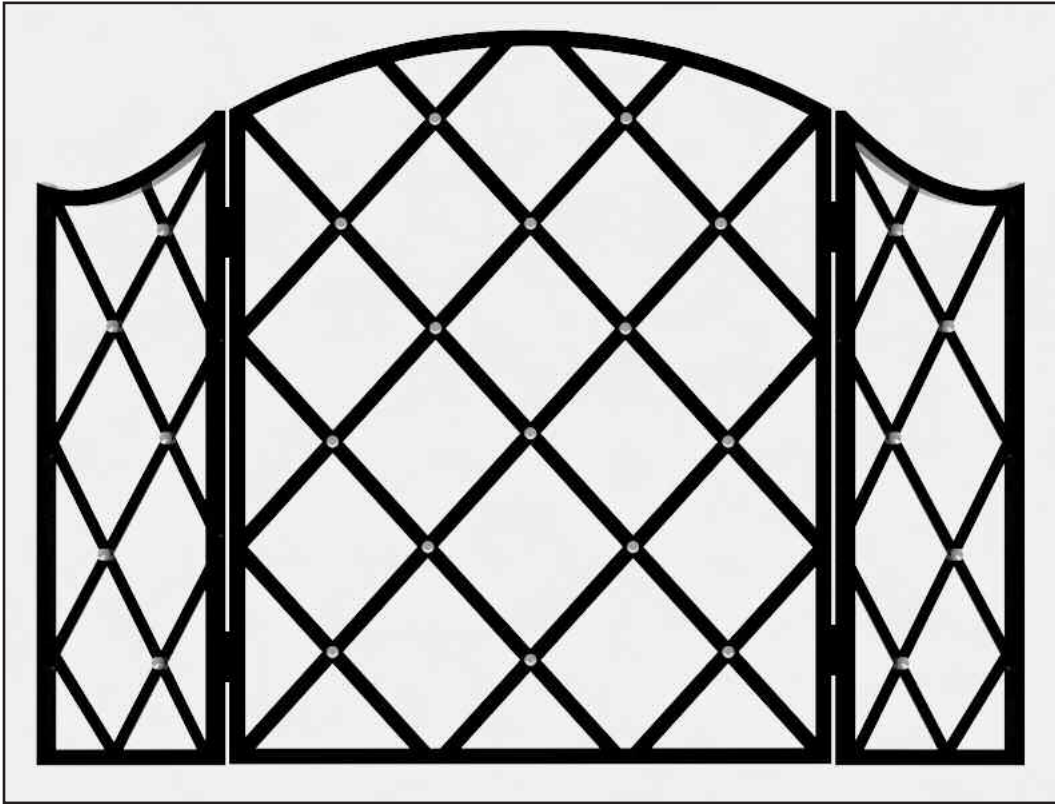

ADVERTENCIA

- No permita que los niños jueguen con la pantalla o cerca de ella.
- No limpie la pantalla mientras esté caliente.
- No toque la pantalla con las manos descubiertas cuando esté en uso.
- Asegúrese de que la pantalla sea lo suficientemente grande como para cubrir por completo la abertura de la chimenea.
- Use guantes resistentes al calor cuando mueva o ajuste la pantalla.

PRECAUCIÓN

- Asegúrese de que los ángulos abiertos de los paneles laterales estén entre 90º y 120º.

CUIDADO Y MANTENIMIENTO

- No limpie la pantalla mientras esté caliente.
- Coloque la pantalla estirada en el piso y límpiela con un paño suave.
- Para almacenarla, pliéguela, colóquela en la caja y ciérrela bien.

